

Japanese

右 左
本取扱説明書で表記された「右」、「左」は、ヘルメットをかぶった状態で着用者から見た「右」、「左」に相当しています。

以下の図はCWR-F2シールドを表しています。
CWR-F2/CWR-F2R シールド
 シールドを完全に下ろすとロックが掛かります。走行時は、このポジションにすることを推奨します。(図A)

図Bのようにシールドロックを解除し、シールドを少し開けた状態で低速走行することで、ヘルメット内を換気することができます。

警告
 図Bのようにシールドを少し開けた状態で高速走行した場合、シールドが不意に開く恐れがあります。高速走行時には使用しないでください。

■ シールドの開け方
 シールドロックボタンを押してロックを解除し、シールドを開けて下さい。(図A)

■ シールドの取り外し方
 1. シールドを全開の状態にします(図1)。
 2. トリガーを下に引きながら、シールドをヘルメット前方へ引っ張り、手前に持ち上げフック(A) (B)を外します(図2)。フック(C)をフックレールから矢印方向を外して取り外します(図3)。
 3. 反対側も同じ要領で取り外します。

■ シールドの取り付け方
 1. シールドを全開状態の位置に合わせて、フック(C)をフックレールに差し込みます(図4)。
 2. シールドをヘルメット前方へ引っ張りながら、矢印付近を上からカチッとロックされるまで押し(図5)、フック(A) (B)をフックレールにしっかりとめ込みます(図6)。
 3. 反対側も同じ要領で取り付けます。
 4. 最後に、シールド開閉を数回繰り返し、フックがシールドベースに確実にハマっているか確認してください。

警告
 フックやギアがシールドベースにはまっていないと、走行中にシールドが外れ、思わぬ事故を引き起こす可能性があります。取り付け後は、シールドの開閉操作を数回繰り返し、フックやギアが確実にハマっているか確認してください。また、シールドを完全に下ろした状態で、ロックが掛かるか確認してください。

シールド調整レバー
 ご使用の過程で、シールドを閉してもシールドと窓ゴムの間に隙間ができた場合は、図のようにシールドベースの調整レバーを下げることでシールドと窓ゴムの間隙を詰めることができます。レバーは左右にあり、それぞれに調整が出来ます。
 ・調整レバーは、デフォルトでは、下図のように標準位置に設定されています。レバーを下げて調整位置に設定することで、シールドが後ろに動きやすくなります。
 ・調整がきつすぎた状態のままにすると、窓ゴムが劣化することがあります。シールドの間隙を見ながら調整してください。
 ・レバーで調整しきれない場合は、スクリューを緩めシールドベースを動かして調整してください。

CWR-F2Rティアオフボタン
 CWR-F2Rティアオフボタンは、レースの際に使用するCWR-F2Rティアオフフィルム(オプション)を装着するためのパーツです。**CWR-F2Rティアオフボタンは、CWR-F2シールドには取り付けられておりませんので、ご注意ください。**
 CWR-F2Rティアオフボタンが破損した場合は、オプションのCWR-F2Rティアオフボタンに交換できます。
 CWR-F2Rティアオフフィルム(オプション)を使用される場合、ティアオフフィルムを取り付ける前に、ティアオフボタンの調整が必要となります。調整の仕方やフィルムの貼り方については、CWR-F2Rティアオフフィルムに同梱の取扱説明書をご参照ください。

警告
 ・ティアオフボタンは反時計回りに回転します。ティアオフボタン本体の矢印と反対の向き(時計回り)には回さないでください。

標準位置
調整位置
シールド調整レバー

ティアオフピン
ティアオフボタン本体
ビス
センターポスト

シールドの取り扱いに関するご注意

- シールドの汚れや傷は走行中の視界の妨げとなり、大変危険です。シールドが汚れたり傷が付いたら、直ちに使用を中止し、取り外して洗浄するか、交換してください。
- シールドは、水で薄めた中性洗剤で洗い、拭き取ってください。水でよくすすいでから柔らかい布でふき取り、乾かしてください。40℃を超える湯、塩水・酸性またはアルカリ性の洗剤・ベンジン・シンナー・ガソリン・その他の有機溶剤・ガラスクリーナー等、有機溶剤を含むクリーナー類は使用しないでください。これらが付着すると、シールドが変質し、安全性に支障をきたす可能性があります。
- シールドが曇った状態で走行しないでください。視界が妨げられ大変危険です。シールドが曇った場合、リアエアインテークを開けたり、シールドを開けたりしてヘルメット内をよく換気し、シールドの曇りを取り除いてください。また、防曇シートの使用も、シールドの曇り防止に効果的です。
- 防曇シートをご使用する場合は、必ずSHOEI純正品のSHOEI DRYLENS 304またはPINLOCK EVO lens DKS304をご使用ください。取り付け方については、防曇シートに同梱されている取扱説明書をご覧ください。
- シールドベースをクリーニングしたり、あるいはシールドベースを交換した場合、シールドを開いてシールドと窓ゴムの密着を確認してください。隙間がある場合、風の巻き込みや風切り音の原因となるため、シールドが窓ゴムに密着するようシールドベースの位置を調整してください。
- スクリューの締め付けなどを行う際は、ビットサイズ[No.2]のプラスドライバーを垂直に当て、ていねいに回してください。サイズの合わないドライバーや電動ドライバ-を使用したり、スクリューをななめに締め付けたりすると、ネジ頭を破損する場合がありますので、十分注意して回してください。スクリューを交換する場合は、必ず純正部品(アルミニウム製)をご使用ください。スクリューを強く締めすぎると、スクリューが破損する場合がありますのでご注意ください。(推奨締め付けトルク:0.8N・m/約8kgf・cm)
- シールドにステッカーや粘着テープを貼らないでください。

サイズ(No.2)

English

The terms "right" and "left" in this manual are from the point of view of a rider who is wearing the helmet.

*The following drawings depict CWR-F2 shield/visor.

CWR-F2/CWR-F2R Shield / Visor

If you pull the shield/visor completely down, it will be locked. It is recommended that the shield/visor remains in this position while riding your motorcycle. (Drawing A)

The fog can be removed by opening the shield / visor slightly as in Drawing B and riding a motorcycle at low speed to circulate air within the helmet.

WARNING
 Do not ride a motorcycle at high speed with the shield / visor opened slightly. The shield / visor can be fully opened unexpectedly and can be very dangerous.

■ Opening the shield/visor
 Press the shield/visor locking button to unlock the shield/visor, and then, open the shield/visor. (Drawing A)

■ Removing the Shield / Visor
 1. Open a shield/visor to fully opened position as per Drawing 1.
 2. While pulling the trigger down, pull the shield/visor toward the front of the helmet and hold up the shield/visor toward you to detach hooks (A) and (B) (Drawing 2).
 3. Do in the same manner for the other side.

■ Installing the Shield / Visor
 1. Adjust a shield / visor to fully opened position and insert shield / visor hook (C) as per Drawing 4.
 2. While pulling the shield / visor toward the front of the helmet, press an arrowed area of a shield/visor indicated in Drawing 5 until it clicks. Then, insert hooks (A) and (B) securely into positions indicated in Drawing 6.
 3. Do in the same manner for the other side.
 4. Open and close a shield / visor a few times and make sure that all the hooks are fixed securely.

警告
 If the hook and gear are not securely fastened in the shield/visor base, the shield/visor may come loose while riding and an accident may unexpectedly occur. After installing the shield/visor, open and close the shield/visor a few times to confirm that the hook and gear fit securely. With the shield/visor completely closed, confirm that the shield/visor locking knob engages with the shield/visor hook.

警告
 If in case a gap still remains after adjustment with a shield / visor adjustment lever:
 ● Reset shield / visor adjustment levers of both sides to positions in the drawing. Loosen both screws of a right side of a helmet and move the CWR-F2 shield / visor base slightly toward the direction indicated in the drawing. Tighten the screws and fix it. Install the shield / visor and check that the window bead completely seals up around the shield / visor.

警告
 If in case a gap still remains even after adjusting up to ●:
 ● If the gap still remains, follow the same procedure to adjust the position of CWR-F2 shield / visor on a left side of a helmet.

警告
 With the shield/visor completely closed, check that the shield/visor is locked after adjusting the position of the CWR-F2 shield/visor base. If the CWR-F2 shield/visor base is positioned extremely toward the back, the shield/visor may not be locked.

Replacement of CWR-F2 Shield / Visor Base

● Remove a shield/visor. Then, remove 4 screws to remove CWR-F2 Shield / Visor Base. Fix a replacement CWR-F2 Shield / Visor Base as follows.

● Align a center of a hole in a bottom of CWR-F2 Shield / Visor Base to a hole of a bottom of a shell and tighten a screw.
 ● Then, align a center of a hole in a top of CWR-F2 Shield / Visor Base to a hole in a top of a shell and tighten a screw.
 ● Do in the same manner for the other side. Refer to Important Notice about Handling the CWR-F2/CWR-F2R Shield / Visor- for extent and way of tightening.
 ● Fix a shield / visor.
 ● Open and close a shield / visor a few times and make sure that all the hooks (A), (B), and (C) are fixed securely.

Adjusting CWR-F2/CWR-F2R Shield / Visor

If a shield / visor doesn't touch a window beading closely or doesn't close after replacement of a shield / visor or CWR-F2 Shield / Visor Base, adjust CWR-F2 Shield / Visor Base in the following manner.

Check Point A
 Adjust until this portion touches an upper window beading closely.

Check Point B
 Adjust until this portion touches a lower window beading lip closely.

警告
 With the shield/visor completely closed, check that the shield/visor is locked after adjusting the position of CWR-F2 shield/visor base. If the CWR-F2 shield/visor base is positioned extremely toward the back, the shield/visor may not be locked.

Shield/visor adjustment lever
 During usage, if a gap occurs between the shield/visor and the window beading even when the shield/visor is closed, lower the adjustment levers of the shield/visor base as shown in the drawing, and you can reduce the gap between them. There are levers on the left and right and they can be each used for adjustment.
 *By default, the adjustment levers are set in the standard positions. By setting the adjustment levers in the adjusted positions, the shield/visor moves backward.
 *If a shield/visor is adjusted too tight, a window beading may be deteriorated. Make adjustment watching a condition of a gap carefully.
 *In case, the gap even remains by using the shield/visor adjustment lever, loosen the screws to adjust the position of the shield/visor base.

CWR-F2R Tear-off Button
 CWR-F2R Tear-off Button is used to equip CWR-F2R Tear-off Film (optional) for races. Please note that the CWR-F2R tear-off buttons are not attached to the CWR-F2 shield/visor.
 When damaged, it may be replaced with optional CWR-F2R Tear-off Button.
 When using CWR-F2R Tear-off Film (optional), adjustment of Tear-off Button is required before fixing Tear-off Film. Manual enclosed in CWR-F2R Tear-off Film explains how to adjust or how to affix.

*Tear-off Button turns anticlockwise. Don't turn it clockwise.

Mechanism of CWR-F2R Tear-Off Button (Left Side)

Tear-Off Pin
Main Part of Tear-Off Button
Screw
Center Post

Important Notice about Handling the CWR-F2/CWR-F2R Shield / Visor

- Dirt and scratches on the shield/visor may obstruct your view while riding and can be very dangerous! If the shield/visor gets dirty or scratched, stop using it immediately. Remove the shield/visor and clean or replace it.
- The shield/visor should be cleaned with a solution of mild, neutral soap and water. Rinse well with pure water then wipe dry with a soft cloth. Do not use any of the following cleaning materials: hot water over 40°C; salt water; any acidic or alkali detergent; benzine, thinner, gasoline, or other organic solvents; glass cleaner; or any cleaner containing organic solvents. If any of these cleaners are used, the shield/visor's chemical nature may be altered and safety may be hindered.
- Do not ride with a shield/visor that is fogged. This may obstruct your view and can be very dangerous. If the shield/visor is fogged, open the lower air intake to circulate air within the helmet and remove the fog from the shield/visor. Use of the PINLOCK® EVO lens is also effective in stopping fog.
- Always use SHOEI's genuine PINLOCK® EVO lens for CWR-F2/CWR-F2R. For fitting PINLOCK® EVO lens, please read instructions enclosed in it.
- After cleaning or replacing the base plates, close the shield/visor and make sure that it touches the window beading in all around. If there is a gap between the shield/visor and the window beading, adjust a position of the base plate and eliminate the gap, because it may cause roll-in of wind or noise.
- For tightening screws, apply No.2 size Phillips head screwdriver vertically and rotate it carefully. If improper sized screwdriver or electric screwdriver is used, a screw head may be broken. Use a genuine screw made of aluminum for replacement. If a screw is tightened too much, it may be broken. (Recommended torque: 0.8 N·m or about 8 kgf·cm)
- Do not place stickers or adhesive tape on the shield/visor.

サイズ(No.2)

한국어

본 취급설명서에 표기된 "우", "좌"는 헬멧을 쓴 상태에서 착용자가 본 "우측", "좌측"에 해당합니다.

*다음 그림은 CWR-F2 실드 나타냅니다.

CWR-F2/CWR-F2R 실드

실드를 완전히 내리면 잠금 처리됩니다. 주행 시에는 이 포지션을 유지할 것을 권장합니다. (그림A)

그림B와 같이 실드 잠금을 해제하고 실드를 조금 연 상태에서 저속 주행하면 헬멧 내부를 환기할 수 있습니다. (그림A)

경고
 그림B와 같이 실드를 조금 연 상태에서 고속 주행하면 실드가 갑자기 열릴 우려가 있어 위험합니다. 고속 주행 시에는 사용하지 않습니다.

■ 실드 개방 방법
 실드 잠금 버튼을 눌러 잠금을 해제하고 실드를 엽니다. (그림A)

■ 실드 분리 방법
 1. 실드를 완전 열림 상태로 만듭니다. (그림1)
 2. 트리거를 아래로 당기면서 실드를 헬멧 전방으로 당겨 앞으로 들어 올린 후 측(A)와 측(B)을 만듭니다. (그림2) 측(C)을 측 레일에서 화살표 방향으로 빼 분리합니다. (그림3)
 3. 반대쪽도 같은 방법으로 분리합니다.

■ 실드 장착 방법
 1. 실드를 완전 열림 상태의 위치에 맞춘 후 측(C)을 측 레일에 끼웁니다. (그림4)
 2. 실드를 헬멧 전방으로 당기면서 화살표 부근을 살짝 소리가 나면서 고정될 때까지 위에서 눌러(그림5) 측(A)와 측(B)을 측 레일에 단단히 채웁니다. (그림6)
 3. 반대쪽도 같은 방법으로 장착합니다.
 4. 마지막으로 실드 개폐 조작용 여러 번 반복해 측(A) 실드 베이스에 확실하게 끼워졌는지 확인해 주십시오.

경고
 측이나 기어가 실드 베이스에 끼워져 있지 않으면 주행 중에 실드가 빠져 예기치 못한 사고를 일으킬 가능성이 있습니다. 장착한 후에는 실드 개폐 조작용 여러 번 반복해 측이나 기어가 확실하게 끼워졌는지 확인해 주십시오. 또한 실드를 완전히 내린 상태에서 실드 잠금 버튼을 실드의 측에 걸리는지 확인해 주십시오.

■ 실드 조정 레버로 조정할 후 틈새가 남아 있는 경우
 ● 실드 조정 레버를 좌우 모두 그림과 같은 위치에 세팅해 주십시오. 우측 CWR-F2 실드 베이스의 나사 2개를 풀고 CWR-F2 실드 베이스를 그림의 화살표 방향으로 이동시켜 위치를 조정할 후 스크루를 다시 조입니다. 조정할 후 실드를 장착하고 틈새를 확인합니다.

■ 순서 ⑦까지 조정해도 틈새가 없어지지 않는 경우
 ● 다시 실드를 분리한 후 순서 ①과 같은 방법으로 좌측 CWR-F2 실드 베이스의 위치를 조정해 주십시오. 다시 실드를 장착하고 틈새를 확인합니다.

경고
 CWR-F2 실드 베이스의 위치를 조정할 후 실드를 완전히 내린 상태에서 잠금 처리되는지 확인해 주십시오. CWR-F2 실드 베이스가 극단적으로 후방에 장착되면 잠금 처리되지 않을 수 있습니다.

CWR-F2R 실드 베이스의 교환

● 실드를 분리하고 좌우 2곳씩(총 4곳) 스크루를 풀 후 기존의 CWR-F2 실드 베이스를 분리합니다. 새 CWR-F2 실드 베이스는 다음과 같이 장착합니다.

우측
좌측

● 볼 쪽의 하부 스크루 구멍을 CWR-F2 실드 베이스 하부 구멍의 상하좌우 중심에 맞춘 후 스크루를 조입니다.
 ● 그다음 헬멧 상부 스크루 구멍을 CWR-F2 실드 베이스 상부 구멍의 좌우 중심에 맞춘 후 스크루를 조입니다.
 ● 반대쪽 CWR-F2 실드 베이스의 스크루도 같은 방법으로 조입니다.
 ※ 조임의 강도와 방향은 '실드 취급에 관한 주의사항'을 참조해 주십시오.
 ● 실드를 장착합니다.
 ● 마지막으로 실드를 여러 번 개폐해 실드의 측(A), 측(B), 측(C)(왼쪽 그림4, 그림5 참조)가 모두 확실하게 끼워졌는지 확인해 주십시오.

CWR-F2/CWR-F2R 실드 조정 방법

실드 또는 CWR-F2 실드 베이스를 교환했을 때 실드와 창고무에 접촉하지 않거나 닿지 않을 경우에는 아래의 방법으로 CWR-F2 실드 베이스를 조정해 주십시오.

체크 포인트 A
 이 부분이 상부 창고무에 밀착하도록 조정


체크 포인트 B
 이 부분이 하부 창고무에 밀착하도록 조정

실드 단면
상부 창고무 단면
하부 창고무 단면

■ 실드 조정 레버로 조정할 후 틈새가 남아 있는 경우
 ● 실드 조정 레버를 좌우 모두 그림과 같은 위치에 세팅해 주십시오. 우측 CWR-F2 실드 베이스의 나사 2개를 풀고 CWR-F2 실드 베이스를 그림의 화살표 방향으로 이동시켜 위치를 조정할 후 스크루를 다시 조입니다. 조정할 후 실드를 장착하고 틈새를 확인합니다.

■ 순서 ⑦까지 조정해도 틈새가 없어지지 않는 경우
 ● 다시 실드를 분리한 후 순서 ①과 같은 방법으로 좌측 CWR-F2 실드 베이스의 위치를 조정해 주십시오. 다시 실드를 장착하고 틈새를 확인합니다.

경고
 CWR-F2 실드 베이스의 위치를 조정할 후 실드를 완전히 내린 상태에서 잠금 처리되는지 확인해 주십시오. CWR-F2 실드 베이스가 극단적으로 후방에 장착되면 잠금 처리되지 않을 수 있습니다.

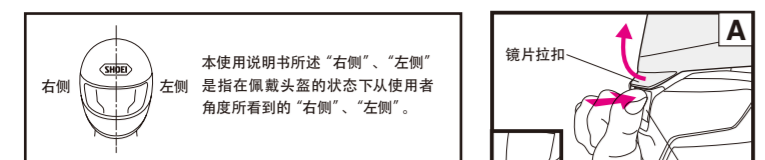

*Below is the CWR-F2 visor diagram description.

CWR-F2/CWR-F2R Visor

When the visor is fully lowered, it will be locked. It is recommended to maintain this position.

As shown in Fig. B, to release the visor lock, the visor is in the unlocked state while riding. The visor can be locked against the helmet.

警告 (Warning)

As shown in Fig. B, if the visor is unlocked while riding at high speed, there is a risk of the visor opening unexpectedly. Do not use the function at high speed.

镜片打开方法 (Lens opening method)

Press the visor lock button to release the lock, open the visor.

镜片拆卸方法 (Lens removal method)


- 1. Make sure the visor is fully open.
2. Push the lever down.
3. The other side is also removed.

镜片安装方法 (Lens installation method)

- 1. Make sure the visor is fully open.
2. Insert the hook into the track.
3. Push the visor forward.
4. Repeat the steps for the other side.


警告 (Warning)

If the hook or gear is not inserted into the lens base, the visor may fall off while riding, causing an accident.

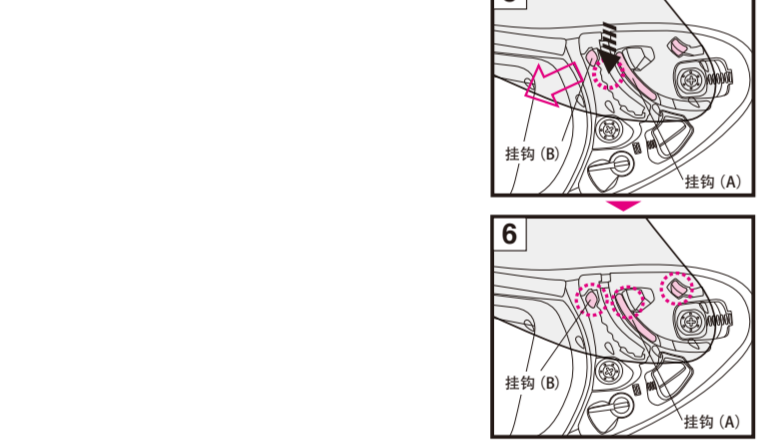

镜片调整杆 (Lens adjustment lever)

During use, if there is a gap between the lens and the window rubber seal, it can be adjusted by the lens adjustment lever.

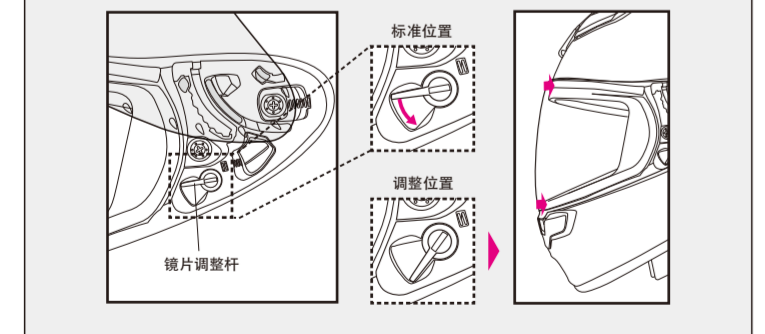

镜片使用相关注意事项 (Lens use related precautions)

- 1. Stop riding immediately if the lens is dirty or damaged.
2. Clean the lens with water and a soft cloth.
3. Do not use hot water, acidic/alkaline cleaners, or solvents.
4. Do not use the lens while riding at high speed.

CWR-F2 Lens Base Replacement


- 1. Remove the lens and unscrew the screws.
2. Remove the old CWR-F2 lens base.



- 3. Tighten the screws and lock the visor.
4. Check the operation.

CWR-F2/CWR-F2R Lens Adjustment Method

After replacing the lens or base, if there is a gap between the lens and the window rubber seal, use the following method to adjust.

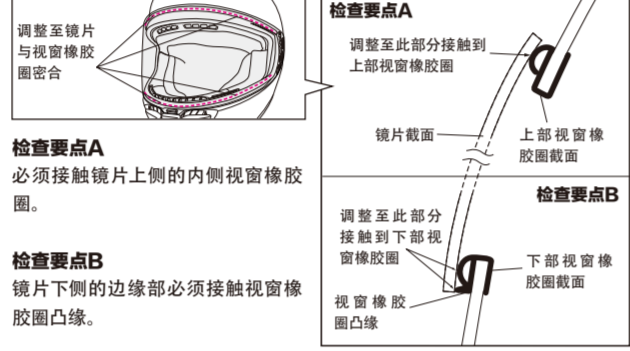

镜片调整后仍有间隙时 (If there is still a gap after lens adjustment)

Adjust the lens base position by turning the adjustment lever. If the gap still exists, adjust the window rubber seal.

调整后仍有间隙不消失时 (If the gap does not disappear after adjustment)


Remove the lens and repeat the adjustment steps. Check the operation after installation.

警告 (Warning)

Adjust the lens base position and ensure it is fully locked. The installation position should be at the rear.


CWR-F2R Easy Membrane Lock

The CWR-F2R Easy Membrane Lock is used for easy installation. Check the operation and adjust if necessary.

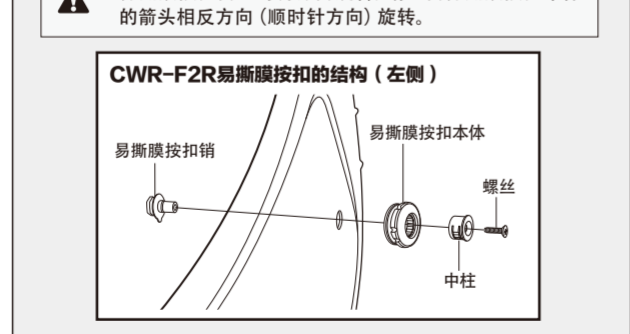

镜片使用相关注意事项 (Lens use related precautions)

- 5. Clean the lens base or replace it.
6. Tighten the screws properly.
7. Do not use the lens while riding at high speed.

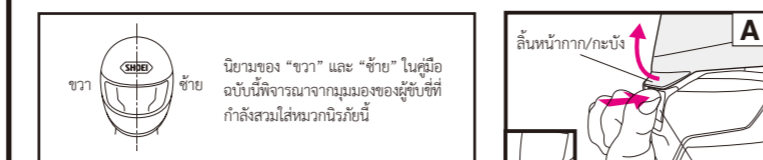

*The diagram below shows the CWR-F2/CWR-F2R visor.

หน้ากาก/กะบัง CWR-F2/CWR-F2R

The front helmet/visor can be adjusted to suit the user's face. It is recommended to maintain this position.

การเปิดหน้ากาก/กะบัง (Opening the helmet/visor)

Press the helmet/visor lock button to release the lock, open the helmet/visor.

การปรับหน้ากาก/กะบัง (Adjusting the helmet/visor)

Adjust the helmet/visor position by turning the adjustment lever. Check the operation after adjustment.

การถอดหน้ากาก/กะบัง (Removing the helmet/visor)

- 1. Press the helmet/visor lock button.
2. Turn the helmet/visor to the side.
3. Turn the helmet/visor to the side.

การติดตั้งหน้ากาก/กะบัง (Installing the helmet/visor)

- 1. Turn the helmet/visor to the side.
2. Turn the helmet/visor to the side.
3. Turn the helmet/visor to the side.
4. Turn the helmet/visor to the side.

คำเตือน (Caution)

Do not use the helmet/visor if the hook or gear is not inserted into the lens base, as it may fall off while riding.

คำเตือน (Caution)

Do not use the helmet/visor if the helmet/visor is not fully locked. The installation position should be at the rear.

การปรับหน้ากาก/กะบัง (Adjusting the helmet/visor)


Adjust the helmet/visor position by turning the adjustment lever. Check the operation after adjustment.

ข้อสังเกตสำคัญเกี่ยวกับการใช้งานหน้ากาก/กะบัง CWR-F2/CWR-F2R

- 1. Do not use the helmet/visor if the helmet/visor is not fully locked.
2. Do not use the helmet/visor if the helmet/visor is not fully locked.
3. Do not use the helmet/visor if the helmet/visor is not fully locked.

การเปลี่ยนฐานหน้ากาก/กะบังรุ่น CWR-F2

- 1. Remove the helmet/visor and unscrew the screws.
2. Remove the old CWR-F2 lens base.

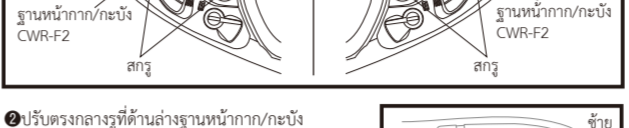

- 3. Tighten the screws and lock the visor.
4. Check the operation.

การปรับหน้ากาก/กะบัง CWR-F2/CWR-F2R

Adjust the helmet/visor position by turning the adjustment lever. Check the operation after adjustment.

การถอดหน้ากาก/กะบัง (Removing the helmet/visor)

- 1. Press the helmet/visor lock button.
2. Turn the helmet/visor to the side.

การติดตั้งหน้ากาก/กะบัง (Installing the helmet/visor)

- 1. Turn the helmet/visor to the side.
2. Turn the helmet/visor to the side.
3. Turn the helmet/visor to the side.

คำเตือน (Caution)


Do not use the helmet/visor if the helmet/visor is not fully locked. The installation position should be at the rear.

คำเตือน (Caution)

Adjust the helmet/visor position by turning the adjustment lever. Check the operation after adjustment.

การปรับหน้ากาก/กะบัง (Adjusting the helmet/visor)

Adjust the helmet/visor position by turning the adjustment lever. Check the operation after adjustment.

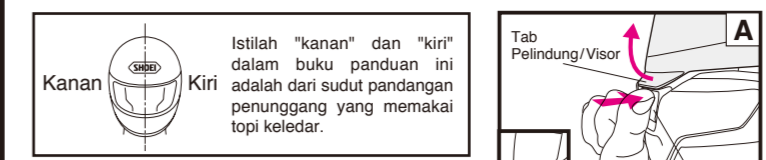

*Below is the CWR-F2 visor diagram description.

Pelindung/Visor CWR-F2/CWR-F2R

When the visor is fully lowered, it will be locked. It is recommended to maintain this position.

As shown in Fig. B, to release the visor lock, the visor is in the unlocked state while riding.

AMARAN (Warning)

Do not use the visor if the hook or gear is not inserted into the lens base, as it may fall off while riding.

การปรับหน้ากาก/กะบัง CWR-F2/CWR-F2R

Adjust the helmet/visor position by turning the adjustment lever. Check the operation after adjustment.

การถอดหน้ากาก/กะบัง (Removing the helmet/visor)

- 1. Press the helmet/visor lock button.
2. Turn the helmet/visor to the side.

การติดตั้งหน้ากาก/กะบัง (Installing the helmet/visor)

- 1. Turn the helmet/visor to the side.
2. Turn the helmet/visor to the side.
3. Turn the helmet/visor to the side.

คำเตือน (Caution)

Do not use the helmet/visor if the helmet/visor is not fully locked. The installation position should be at the rear.

คำเตือน (Caution)

Adjust the helmet/visor position by turning the adjustment lever. Check the operation after adjustment.

การปรับหน้ากาก/กะบัง (Adjusting the helmet/visor)

Adjust the helmet/visor position by turning the adjustment lever. Check the operation after adjustment.

Penggantian Tapak Pelindung/Visor CWR-F2

- 1. Remove the visor and unscrew the screws.
2. Remove the old CWR-F2 lens base.



- 3. Tighten the screws and lock the visor.
4. Check the operation.

Melarskan Pelindung/Visor CWR-F2/CWR-F2R

After replacing the lens or base, if there is a gap between the lens and the window rubber seal, use the following method to adjust.

Titik Semak A (Check Point A)

Check the operation after adjustment.

Titik Semak B (Check Point B)

Check the operation after adjustment.

คำเตือน (Caution)

Do not use the helmet/visor if the helmet/visor is not fully locked. The installation position should be at the rear.

คำเตือน (Caution)

Adjust the helmet/visor position by turning the adjustment lever. Check the operation after adjustment.

การปรับหน้ากาก/กะบัง (Adjusting the helmet/visor)

Adjust the helmet/visor position by turning the adjustment lever. Check the operation after adjustment.

Tuli pelarasan pelindung/visor

Adjust the visor position by turning the adjustment lever. Check the operation after adjustment.


Notis Penting tentang Pengendalian Pelindung/Visor CWR-F2/CWR-F2R

- 1. Do not use the visor if the helmet/visor is not fully locked.
2. Do not use the visor if the helmet/visor is not fully locked.
3. Do not use the visor if the helmet/visor is not fully locked.

Butang Koyak CWR-F2R

The CWR-F2R Easy Membrane Lock is used for easy installation. Check the operation and adjust if necessary.

Mekanisme Butang Koyak CWR-F2R (Sebelah Kiri)

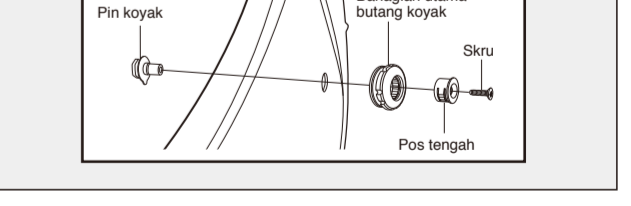

Notis Penting tentang Pengendalian Pelindung/Visor CWR-F2/CWR-F2R

- 1. Do not use the visor if the helmet/visor is not fully locked.
2. Do not use the visor if the helmet/visor is not fully locked.
3. Do not use the visor if the helmet/visor is not fully locked.