


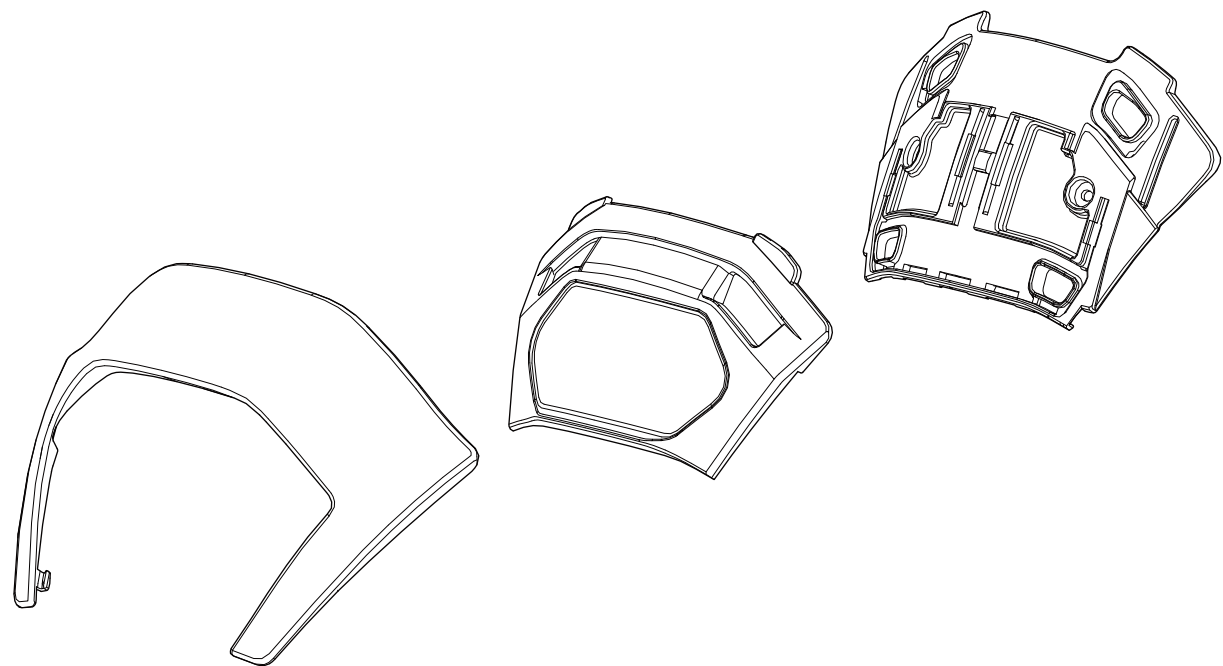

Z-9 アッパーエアインテークの交換方法とご注意

436-JP



SHOEI CO., LTD. HEAD OFFICE

1-31-7 Taito, Taito-ku, Tokyo 110-0016, JAPAN Tel: +81 3 5688 5170 Fax: +81 3 3837 8245

For further information, please consult your local SHOEI distributor or dealer.

Pour plus d'informations, veuillez consulter votre distributeur ou revendeur local SHOEI.

Weitere Informationen erhalten Sie von Ihrem SHOEI-Vertriebspartner oder beim Händler.

Per ulteriori informazioni, consultare il distributore o il rivenditore SHOEI locale.

Para obtener más información, consulte con su distribuidor o proveedor local de SHOEI.

Para mais informações, consulte o seu distribuidor ou revendedor SHOEI local.

Για περισσότερες πληροφορίες, επικοινωνήστε με τον τοπικό διανομέα ή τον αντιπρόσωπο της SHOEI.

Aby uzyskać więcej informacji, skontaktuj się z lokalnym dystrybutorem lub dealerem SHOEI.

Lisätietoja saat paikalliselta SHOEI-jakelijalta tai -jälleenmyyjältä.

För ytterligare information, kontakta din lokala SHOEI-leverantör eller SHOEI-återförsäljare.



shoei.com/worldwide/sales.html

Contents	
日本語	1
English	2

Z-9 アッパーエアインテークの交換方法とご注意

交換用パーツの梱包品：カバー、シャッター、ベース、ビス（2本）
本作業に必要なもの：布を巻きつけたマイナスドライバーなどの先端が細くて平らなもの、プラスドライバー（ビットサイズ「No.0」）

- 
- ビスの取り外し／取り付けで使用するプラスドライバーは、ビットサイズ「No.0」を使用してください。
 - パーツを取り外す際は、シェルを傷つけないように、十分ご注意ください。
 - ビスは、上からまっすぐに差し込んで、取り付けてください。
 - 両面テープは、貼り直しをすると粘着力が落ちますので、ご注意ください。
 - 取り外したパーツは、必ず元の位置に、正しく取り付けでてください。ヘルメットの保護性能や、パーツが持つ機能を確保できなくなります。
 - お手入れに、ベンジン、シンナー、ガソリン、その他溶剤は、絶対に使用しないでください。パーツが破損する恐れがあります。

アッパーエアインテークの取り外し方法

1.

カバーとシェルの間に、布を巻き付けたマイナスドライバーなどを差し込みます（図 1）。
2.

カバーを少し持ち上げながら両面テープを剥がし（図 2）、カバーを取り外します（図 3）。
3.


シャッターを半開の状態にします（図 4）。
4.

シャッターとベースのすき間に、布を巻き付けたマイナスドライバーなどを差し込み（図 5）、テコの要領で持ち上げるようにしてシャッターのツメ（4カ所）を外し、シャッターを取り外します（図 5）。
5.

ベースを固定しているビス（x2）を取り外し、シェルからベースを取り外します（図 6）。

※ このとき、ビスをベンチレーションホールに落とさないように注意してください。
6.

シェル表面のゴミ、ホコリ、油分を取り除きます。

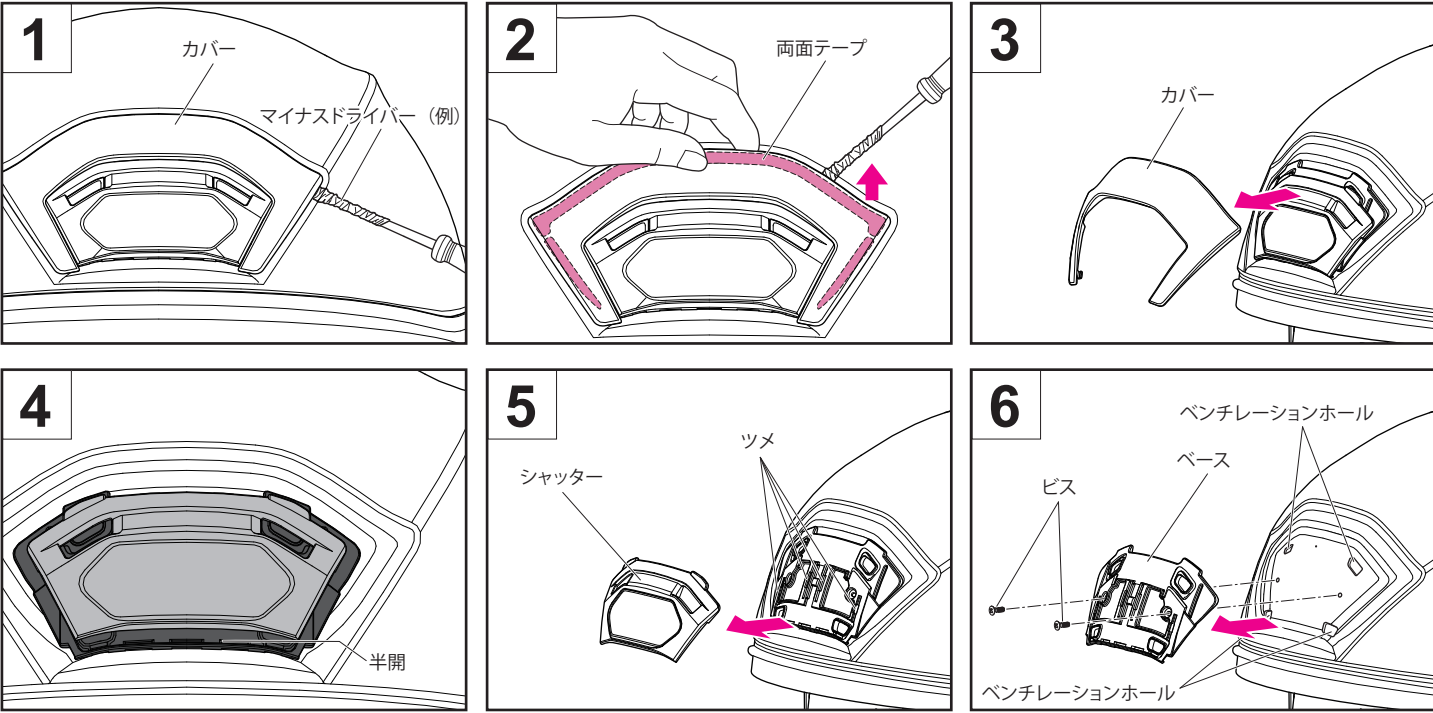

アッパーエアインテークの取り付け方法

1.

ベースのビス穴とシェルのビス穴（2カ所）、ベースの通気穴とベンチレーションホールの位置が合うように、ベースを重ね、ビス（x2）で固定します（図 7）。
2.

図で示した部分に、シリコンオイルを塗布します（図 8）。


※ シリコンオイルは、ヘルメットに付属しているものをご使用ください。また、シリコンオイルを付けすぎると塗装面に対するにじみの原因となりますので、ご注意ください。
3.

シャッターを半開位置に合わせ（図 9）、シャッターのツメ（4カ所）がベースのレールにはまるように、上から押します（図 10）。
4.

カバーに付いている両面テープの保護シートを剥がします（図 11）。
5.

カバーのツメをベース下側の溝に引っ掛け、引っ掛けた部分を指で押さえながらカバーをシェル側に倒すようにして、両面テープを貼り付けます（図 12）。

※ 両面テープを貼り付ける際は、カバー中央部から両端に向かって押しつけ、しっかりと貼り付けてください（図 13）。

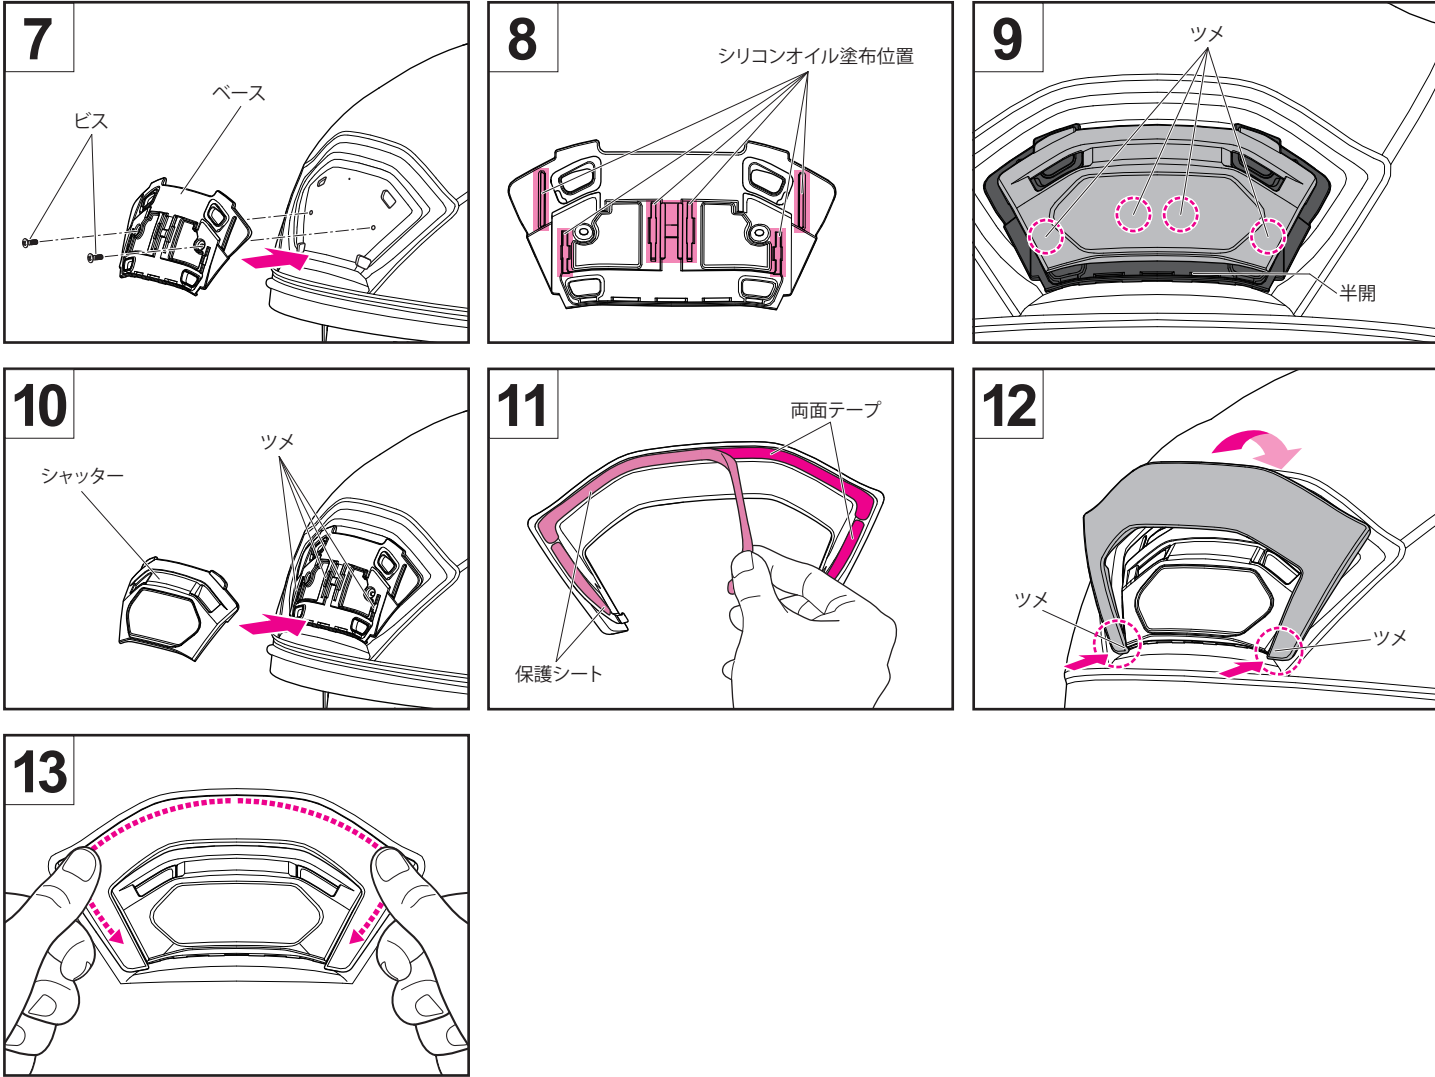

株式会社 SHOEI 本社・国内営業部

〒110-0016 東京都台東区台東 1-31-7 Tel: 03-5688-5180 Fax: 03-3837-8245

製品についてのお問い合わせは、お近くの SHOEI 正規販売店が下記 Web サイトをご覧ください。

shoei.com/worldwide/sales.html



436-JP

www.shoei.com

Procedure and Precautions for Replacing the Z-9 Upper Air Intake

Included parts for replacement: Cover, shutter, base, screws (2 pcs.)
Items required for this procedure: A flat-ended, thin-tipped object, such as a slotted screwdriver wrapped with a cloth, Phillips screwdriver (bit size No. 0)

- 
- Be sure to use a No. 0 Phillips screwdriver to remove or install the screws.
 - Be careful not to scratch the surface of the shell when removing the parts.
 - To install the screws, insert them straight from the top into the shell surface.
 - Performance of the double-sided tape deteriorates when repasted.
 - After removal, be sure to remount the parts at their original positions. Otherwise, the helmet's protective performance or the functionality of the parts may decrease.
 - Do not use benzine, thinner, gasoline, or any other solvents for maintenance. Otherwise, parts may be damaged.

How to Remove the Upper Air Intake

1. Insert a slotted screwdriver or the like wrapped with a cloth between the cover and the shell (Drawing 1).


2. Peel off the double-sided tape while raising the cover slightly (Drawing 2), and remove the cover (Drawing 3).

3. Put the shutter in the half-open state (Drawing 4).

4. Insert a slotted screwdriver or the like wrapped with a cloth between the shutter and the base (Drawing 5), and use a levering action to remove the four shutter tabs and then the shutter (Drawing 5).
5. Remove the two screws that secure the base, and then remove the base from the shell (Drawing 6).

Note: During this procedure, be careful not to drop any screws into the ventilation hole.

6. Clean off any dirt, dust, or oil remaining on the surface of the shell.

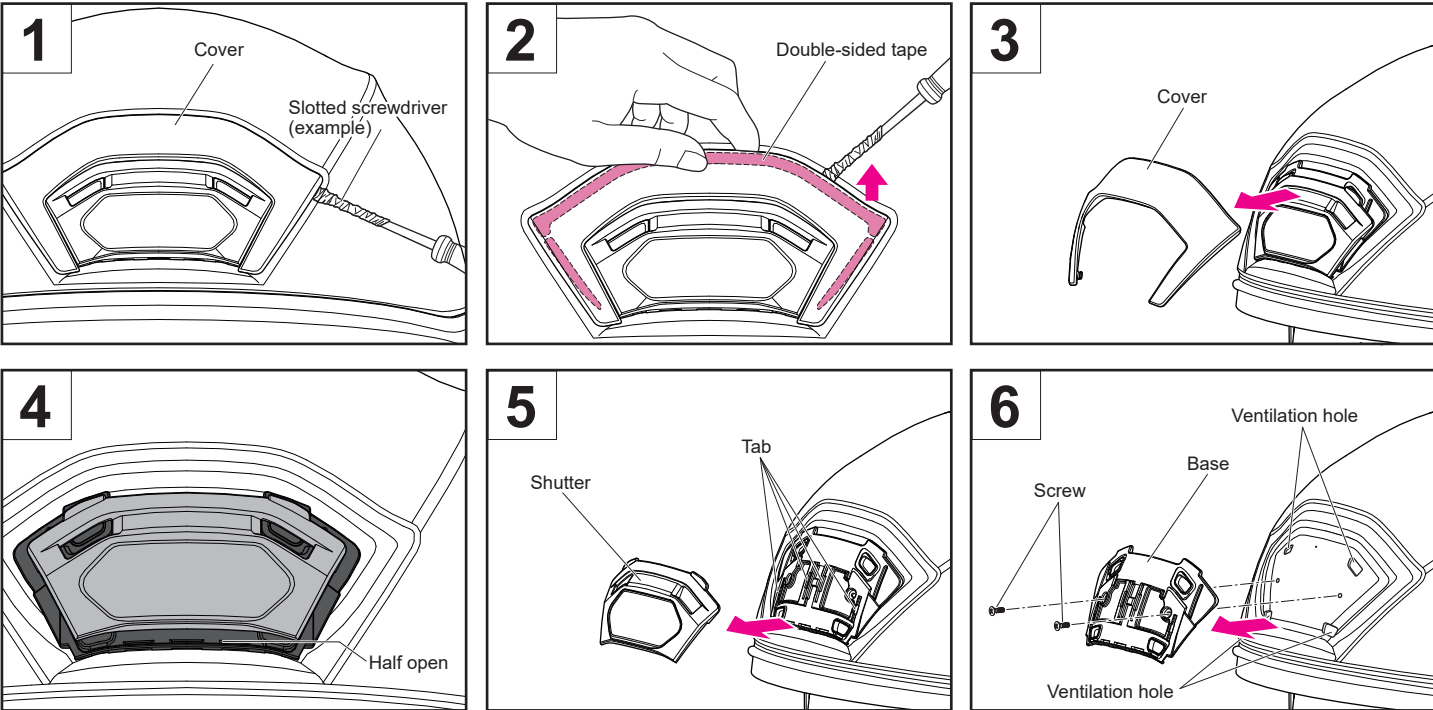

How to Attach the Upper Air Intake

1. Align both the two screw holes in the base and in the shell, and also align the ventilation holes and the base vent holes. Then, tighten the two screws firmly (Drawing 7).

2. Apply silicone oil to the specified areas (Drawing 8).


3. Set the shutter to the half-open position (Drawing 9), and push it from above so that the four tabs of the shutter fit into the rails on the base (Drawing 10).
- Note: Use the silicone oil provided with the helmet. In addition, be careful not to apply too much silicone oil as it will cause the oil to run onto the painted surfaces.

Note: During this procedure, firmly engage the part until it clicks into place.

4. Peel off the protective sheet of the double-sided tape attached to the cover (Drawing 11).

5. Hook the cover tab into the base lower slit. While holding the hooked part with your fingers, tilt the cover toward the shell to attach the double-sided tape (Drawing 12).

Note: When attaching the double-sided tape, press the cover from its center toward both ends, and attach it securely (Drawing 13).

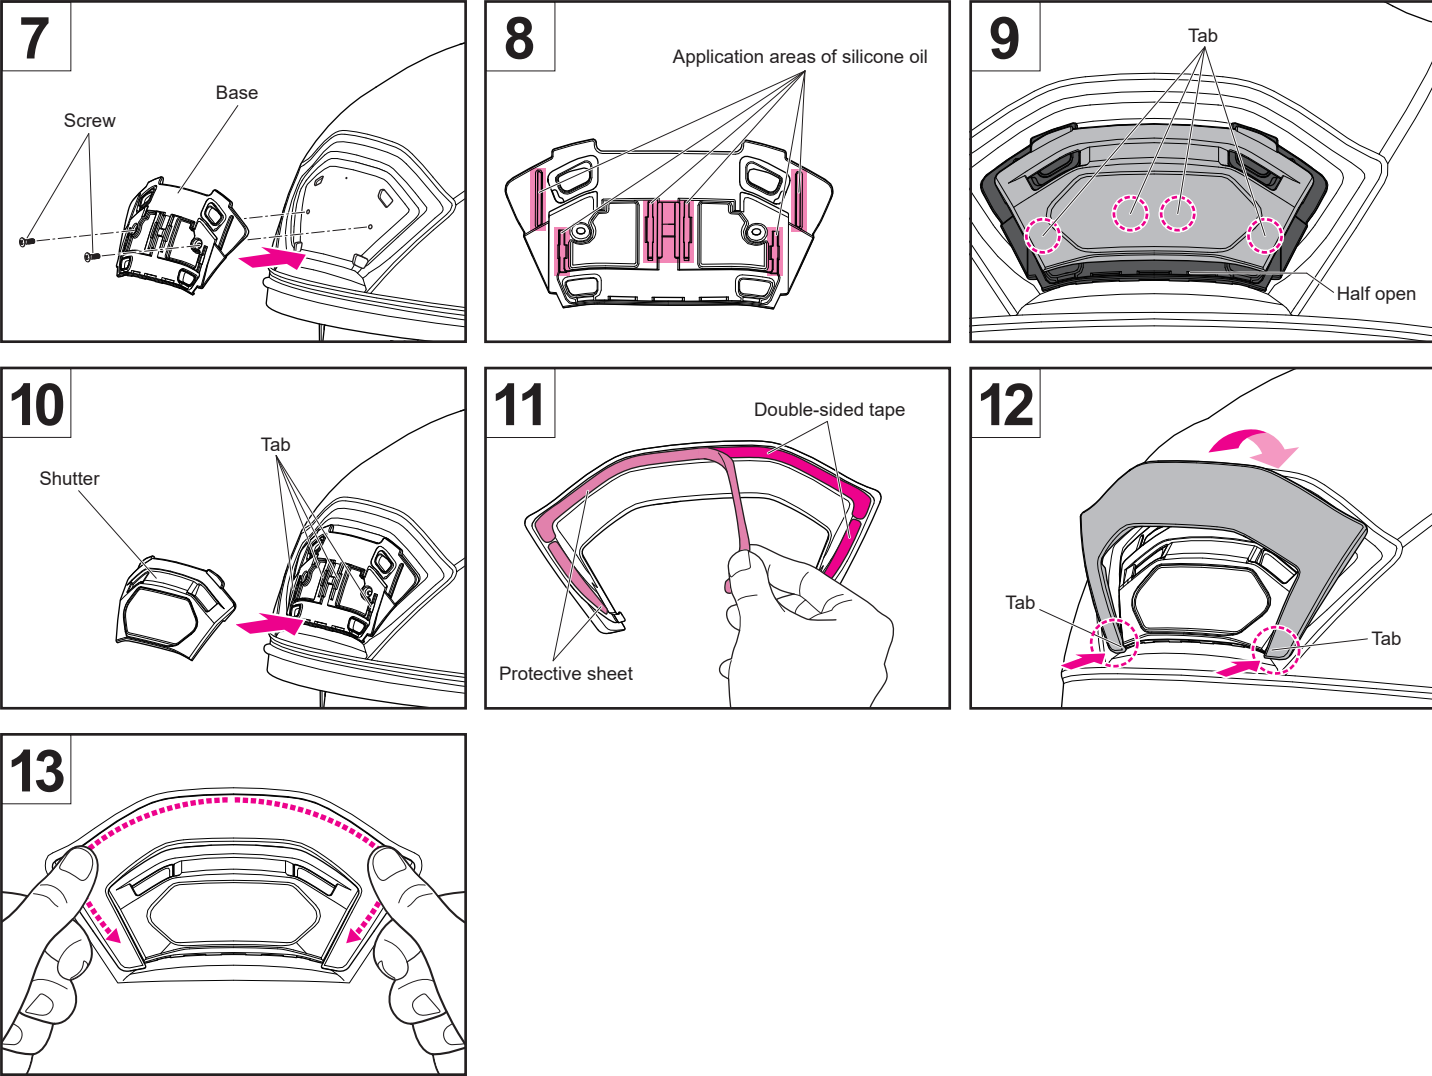

SHOEI CO., LTD. HEAD OFFICE

1-31-7 Taito, Taito-ku, Tokyo 110-0016, JAPAN Tel: +81 3 5688 5170 Fax: +81 3 3837 8245

For further information, please consult your local SHOEI distributor or dealer.

shoei.com/worldwide/sales.html



436-JP

www.shoei.com